








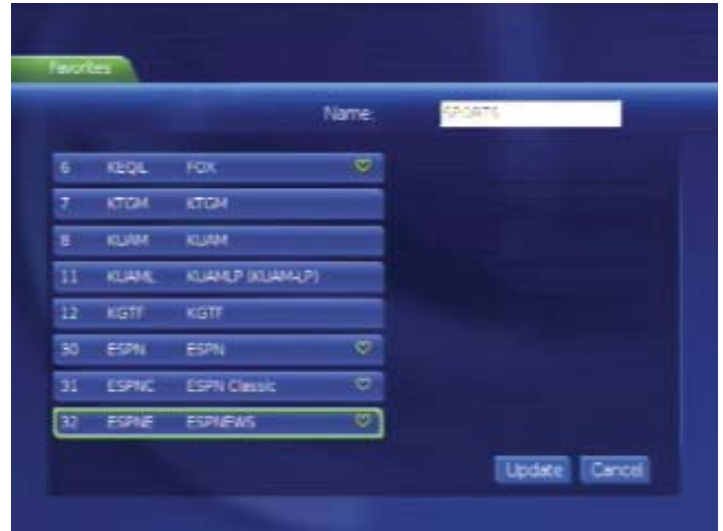


 




FAVORITES

You can customize your Interactive Program Guide to display only the channels you want by creating a Favorites list. Up to 4 different favorite lists can be created for different user preferences. If you have set up multiple user accounts under *Setting/Users*, the Guide's channel lineup will change to reflect that user's preferences.



Creating a Favorites list

1. Press  and highlight *Favorites* in the *Main Menu* bar. Press  to select.
2. Use the   arrow keys, select *create*.
3. To create the name of the favorite list, highlight the box next to *Name*. Press  to display the onscreen keyboard.
4. Use the  keys to select *clear all* and Press . Or Press the  button on the remote control to clear.
5. Type the name of the favorite list you want to create by navigating to each letter and press  to select.
6. Navigate to *Done* and press .
7. Use the   arrow keys and Press  to select each channel(s) you would like added to a favorite list. A *heart* will appear next to the channel to indicate a favorite channel selection.
8. Navigate to *Update*. Press  to activate.