 






Note: Movies can have ratings of PG-13, R, NC-17, AO, X, XX, XXX, G, PG.
If you select PG, any movies with content rated higher than PG will be blocked.

TV shows can have ratings of TVY, TVG, TVPG, TV14, TVMA, TVY, TVG, TVY7.
If you select TVG, any shows with content rated higher than TVG will be blocked.

PARENTAL CONTROL - Change the amount of time parental controls are temporarily disabled



1. Use the  to navigate to *unlock timeout* and press .
2. Use the  arrows to select the amount of time you wish the channel to be unblocked, choose between 30 and 270 minutes. Press .
3. Select the check box next to *block unrated* to block TV programs and movies that do not have ratings.
4. Select the check box next to *show blocked program info* to show descriptions of blocked programs.

Note: In addition to standard ratings, you can block content based on sexual situations, language, suggestive dialogue, violence and fantasy violence. Check the box next to the content rating to block that content.

5. When you have finished setting your parental controls, navigate to *submit* and press .
6. To disable parental controls, remove the check mark from beside *parental control* in the *settings/preferences* in the *main menu* bar.

Temporarily enabling blocked content

If you wish to temporarily watch content that is blocked by parental controls:

1. Press  and select *Parental Control*. Press . Parental controls must be enabled to display the Parental Control tab in the Main Menu Bar.
2. Enter your password (*the default password is 0*). Once you have done this, the parental control icon should appear unlocked. After the amount of time is selected in *unlock timeout*, you will be prompted for your password again. If it's not entered, the channel will automatically block again.

Quick tip

You are able to unblock a channel on the fly by pressing  while on a program.