








## PARENTAL CONTROL - Managing multiple user accounts

To create different parental controls for different users, you will need to set up multiple profiles. Once created, users can log in and access only the content appropriate to their profile.











1. Press  and use the  to select settings. Press .
2. Enter your password as prompted and Press .
3. Use   arrows to select *users*. Press .
4. Once in the users section, you can *add*, *edit*, or *delete* user profiles and set parental controls for each user.

### Quick tip

Parental controls such as *unlock timeout*, *block unrated* and *show blocked program info* can only be changed by the PRIMARY user. The PRIMARY user is also the only one who is able to create new users.

## Adding a user profile



1. Once in the *users* section, use the  to navigate to *add* and press .
2. Navigate to *new login* and press  to enter a new profile name using the onscreen keyboard.
3. Type the user name by navigating to the letters you want to type and press  to select.
4. Navigate to *done* and press .
5. Use   to select *new password* and use the number keys on the remote to enter the numeric password.
6. Use   arrows to select *enter pin* and enter the PRIMARY user's pin (*the default PIN is 0*).
7. Navigate to *submit* and press  to save User.