




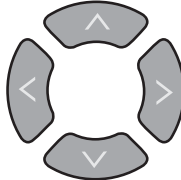
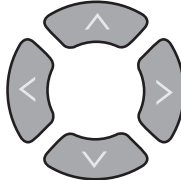
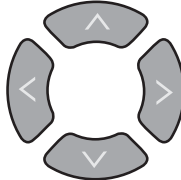




PARENTAL CONTROL - Editing a user profile

1. Once in the user section, navigate to the user profile that you would like to change and press .
2. Navigate to *edit* and press  to *edit* and *change* the profile name.
3. Type the user name by navigating to the letters you want to type.
4. Navigate to *done* and press .
5. Select a *new password* and press  to enter the new password.
6. Navigate to *done* and press .
7. Use  to select *confirm password* and enter the password again.
8. Use  to select *enter pin* and enter the PRIMARY user's pin (*the default pin is 0*).
9. Use  to select *submit* and press  to *save* user.

Deleting a user profile

1. Once in the *users* section, navigate to the user profile that you would like to delete.
2. Navigate to *delete* and press .

Switching users

To enable the additional users, ensure that require login is checked in settings. To switch between users, you will need to sign out then sign back in.