gta V Potenza Remote Guide

Quick Setup STB Codes


1. Hold SETUP plus the digit key 6, until the STB device key blinks twice.

Manual Code Entry

1. Hold SETUP until the STB key blinks twice. Enter the four digit code:

ADB-2254 IS5045-1376

2. Verify that the STB key blinks twice to confirm the code is stored

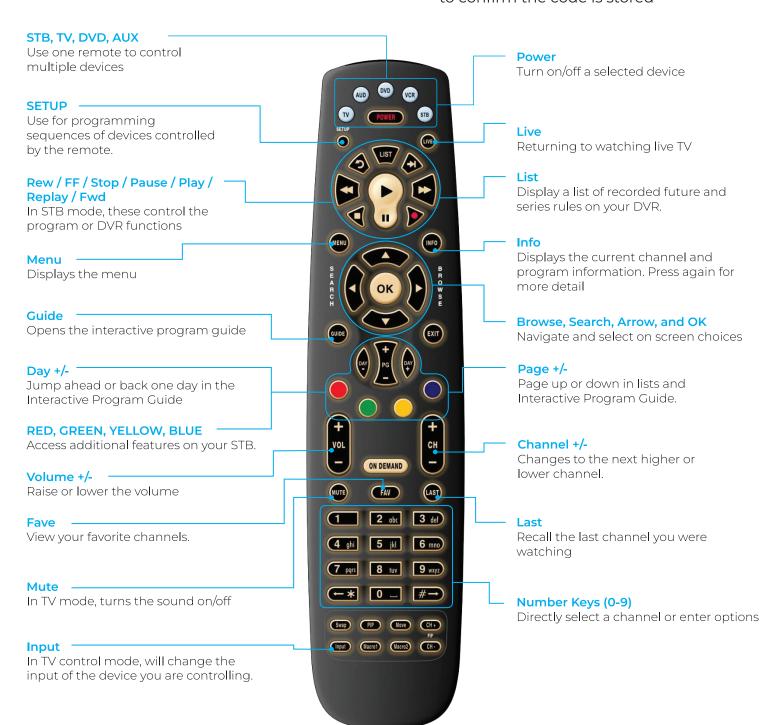

gta V Potenza Remote Guide

Other Features:

A. FAVORITES

- 1. Create a list with your favorite channels
 - A. 5 additional Favorites Lists:
 - Press Menu. Arrow down to "Settings" and then arrow right to "Edit Favorites".
 Press OK.
 - II. Using the Arrow buttons, move through the channels and press **OK** to add or remove a channel to your Favorites List. Or, type in a channel using the number keys. The channels added to your Favorites List are marked with a "checkmark"
 - III. When finished selecting your favorite channels, press the Blue button to save your list.

B. Using Favorite Lists:

- I. Press FAV. By default, your list is 'All' channels.
- II. Arrow Up/Down to select your Favorites List and Press OK.
- III. Use the Channel Up/Down buttons or the Arrow buttons to change the channels in the selected list. Or, use the direction up/down buttons to navigate the channels on the selected list and direction left/right to view previous and future channel programs.
- IV. To leave a Favorites List, press FAV.

 Arrow Up/Down to select "All Channels" and press OK.
- V. Additionally, you can press the blue button to switch between your favorites list.

A. REMINDERS:

Set Reminders: While viewing the guide, highlight the program where you want a reminder and press 'OK'.



gta V Potenza Remote Guide

Follow the instructions below to easily program your remote and start controlling your device.

- 1.) Turn **ON** the TV that you want to setup on the remote.
- 2.) Point the remote to the device you would like to pair. Then press the corresponding **device key** (TV, DVD, VCR, AUD, or STB button).
- 3.) Press and hold SETUP until the device key blinks twice.
- 4.) Find the brand of your device from the chart below. Press the **DIGIT** key for your device/brand.
- 5.) You can now control your device with the remote.

TV		DVD/VCR		AUDIO	
Digit	Brand	Digit	Brand	Digit	Brand
1	Insignia	1	Insignia	1	Bose
2	LG	2	LG	2	Denon
3	Panasonic	3	Panasonic	3	LG
4	Philips / Magnavox	4	Philips / Magnavox	4	Onkyo
5	Samsung	5	RCA	5	Panasonic
6	Sanyo	6	Samsung	6	Philips
7	Sharp	7	Sharp	7	Pioneers
8	Sony	8	Sony	8	Samsung
9	Vizio	9	Toshiba	9	Sony
0	Westinghouse	0	Vizio	0	Yamaha

^{*}If the model of your device is not on this list, please call (671) 644-4482 for assistance.

If you prefer your external audio device or soundbar as the default audio output controlled by your remote, follow these steps:

Lock the volume keys to the AUD device.

- Hold SETUP until the device key blinks twice
- Enter 993
- Press VOL +
- Press AUD